

Explore BlackBerry Storm2 9520/9550 Smartphones

BlackBerry Storm2

Home



To turn your BlackBerry® device on or off, press and hold the **Power/Lock** key. To lock the screen and side keys so that they cannot be pressed when your device is not in use, press the **Power/Lock** key.

Press the **Menu** on the Home screen to view all application icons. Press the **Menu** key again to move or hide icons, and open the Options screen to change your wallpaper or theme and other Home screen preferences.

Phone



Press the **Menu** key in the phone application to set your ring tone, create speed dial numbers, and open the Options screen to set up smart dialing and other phone options. Press the **Menu** key during a call to turn on or turn off the speakerphone or add call notes.

Browser



Press the **Menu** key in the browser to open the Options screen to set your home page and fonts, clear your browser history, and change other browser settings. Press the **Menu** key on a web page to switch the page view, search for text, send a web page, and set other web page options.

Media



Press the **Menu** key on the media home screen to navigate to files on your device or media card, view memory usage, and open the Options screen to set the convenience keys to open media applications.

Camera



Press the **Menu** key in the camera application to view your pictures and open the Options screen to set the picture size and quality, change the color effect, and set other camera options.



Pictures



Escape key

To scroll through pictures, slide your finger left or right quickly.

You can also scroll through web pages, messages, calendar pages, and other screens.

To zoom into and then pan a picture, press the screen to zoom then slide your finger in any direction to pan. To zoom out, press the **Escape** key.

You can also zoom into and pan web pages.



Messages



Mark opened icon

Mark unopened icon

To select multiple messages, touch the first and last message.

Delete messages icon

File messages icon

Cancel selection icon

Type text



123 key
Press to switch to numbers. Press and hold to turn on number lock.


Symbol key
Press to insert a symbol

Press and hold a letter to capitalize the letter

Enter key

Shift key
Press and hold to turn on capital letter lock

Cut, copy, and paste

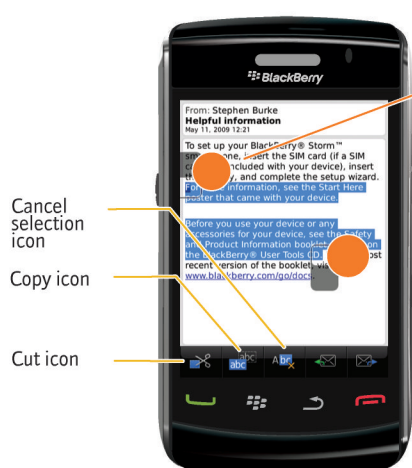

Cancel selection icon

Copy icon

Cut icon

To select text, touch the beginning and end of the text

Keyboard views



If you are using your device in landscape view, the full keyboard appears.

If you are using your device in portrait view, you can switch between the SureType® keyboard, multi-tap keyboard and full keyboard. The SureType keyboard and multi-tap keyboard show more than one letter on each key. You can set your device to use one of these three portrait keyboards by default.

Find more information



Setup wizard application: Find typing tutorials and videos that show you how to use the SureType® touch screen. Open this application from the Setup folder on the Home screen.



Help application: Find step-by-step instructions for all device tasks. Open this application from the Home screen or from an application menu.

For information about setting up your device and learning common tasks, see the *Start Here* poster and *Learn More* booklet that came with your device.

©2009 Research In Motion Limited. All rights reserved. BlackBerry®, RIM®, Research In Motion®, SureType®, SurePress™ and related trademarks, names and logos are the property of Research In Motion Limited and are registered and/or used in the U.S. and countries around the world. Bluetooth is a trademark of Bluetooth SIG. Google Mail is a trademark of Google Inc. Hotmail and Windows Live are trademarks of Microsoft Corporation. Wi-Fi is a trademark of the Wi-Fi Alliance. All other trademarks are the property of their respective owners. This documentation is provided "as is" and without condition, endorsement, guarantee, representation or warranty, or liability of any kind by Research In Motion Limited and its affiliated companies, all of which are expressly disclaimed to the maximum extent permitted by applicable law in your jurisdiction.

MAT-29260-001 | PRINTSPEC-064 | SWD -834357-1023042027-001 | RCP51UW/RCK71CW



Press the **Menu** key in a picture to rotate or resize the picture, send it in a message, or set it as your wallpaper or caller ID. Press the **Menu** key on the media home screen to open the Options screen to sort pictures and set up slideshows.



Press the **Menu** key in your list of messages to add flags to email messages, compose a specific type of message (for example, an SMS text message), and open the Options screen to set email filters, spell checking options, and other message options.

By default, your device displays a list of suggested words as you type. You can select the highlighted word or continue typing. You can also set options for spell checking and AutoText, and add words to the custom dictionary.

The language that you are typing in determines the typing input methods that are available. For more information about typing input methods, visit www.blackberry.com/go/docs.

When you select text, your device displays a frame around the cursor. To move the cursor one character at a time, touch the cursor frame and slide your finger.

You can cut and copy text you type and paste it into applications that include text fields. You can also copy text from most web pages and paste it into other applications.